SEMAK

SEMAK HAND DRYERS – MODELS MC007 & MC008

OPERATION AND WARRANTY BOOKLET

MC007

MC008

SEMAK AUSTRALIA: FACTORY 18, 87-91 HALLAM SOUTH ROAD, HALLAM VIC 3803

PH 03 9796 4583 FAX 03 9796 4586 WEB WWW.SEMAK.COM.AU

Table of Contents

General Safety Instructions for All Semak Products 4

Safety Instructions 5

Operating Instructions for the Semak Hand Dryer 6

Cleaning Instructions for the Semak Hand Dryer 6

Mounting Instruction 7

Connection Diagram & Parts List 8

Specifications 9

Connection Description 9

Service & Maintenance 10

Electrical Compliance 10

Warranty 10

Warranty Registration 12

WARNING: PLEASE ENSURE THAT ALL SAFETY INSTRUCTIONS ARE UNDERSTOOD BY ALL PERSONS WHO USE THIS APPLIANCE

Arabic

تحـذيـر : تأكد من فهم كل من يستعمل الجهاز لكـافة إحتيـاطات الأمـان وتعلـيمات التشغيـل .

Cambodian

ការព្រមានប្រាប់: សូមប្រាកដឲ្យបានច្បាស់ថាការប្រុងប្រយ័ត្នវ៉ែនតានិរភ័យ និងការណែនាំប្រើទាំងអស់ បានត្រូវកន្ទ្ទាស់ប្រាប់ច្បាស់លាស់ល្អ ទោះជាសំរាប់អ្នកដែលប្រើប្រាស់ក្រឿងប្រដាប់ទាំងនេះហើយ ។

Chinese

警告：必需確保任何使用這器具的人士，已明瞭一切安全預防措施及操作指示。

Croatian

Upozorenje: Budite sigurni da svi koji rade na aparatima znaju o mjerama opreza i funkciji ovih aparata.

French

Attention: Veuillez vous assurer que toutes les personnes utilisant l'appareil comprennent tous les conseils d'utilisation et précautions de sécurité.

German

Warnung: Versichern Sie sich, daß alle Sicherheitsvorkehrungen und Bedienungsanleitungen von allen Benutzern des Gerätes verstanden worden sind.

Greek

Προειδοποίηση: Βεβαιωθήτε ότι όλα τα προφυλακτικά μέτρα ασφαλείας και οι οδηγίες λειτουργίας κατανοούνται από όλα τα άτομα που χρησιμοποιούν τη συσκευή.

Italian

Attenzione: assicuratevi che tutti coloro che adoperano i macchinari conoscano le misure di sicurezza e le istruzioni relative al funzionamento.

Macedonian

Предупредување: Осигурајте сите оние кои користат апарати ги разбираат мерките за безбедност и упатства за работа.

Malay

Amaran: Pastikan bahawa semua langkah keselamatan dan keterangan operasi telah difahami oleh semua pengguna alat ini.

Polish

Ostrzeżenie: upewnij się, że wszystkie środki ostrożności i instrukcje obsługi są rozumiane przez wszystkich używających tego urządzenia.

Portugese

Atenção: Assegure-se de que todas as medidas de segurança e instruções de funcionamento são compreendidas por todos aqueles que usam este aparelho.

Russian

Предупреждение: Позаботьтесь о том, чтобы все меры безопасности и инструкции по эксплуатации были поняты всеми, кто пользуется этим устройством.

Serbian

Упозорење: Водите рачуна да сви који употребљаааају овај уређај знају мере предострожности и упутства за руковање.

Spanish

Advertencia: Haga que las precauciones e instrucciones para el uso de este aparato sean entendidas por todos los que lo usan.

Tagalog

Babala: Siguruhing ang lahat nu mga pangkaligtasang pag-iingat at mga tagubilin hinggil sa pagpapaandar ay naiintindihan ng lahat ng gumagamit ng kasangakapan.

Turkish

Uyarı: Tüm güvenlik önlemlerinin ve aygıtı çalıştırma talimatlarının aygıtı kullanan herkes tarafından anlaşılmış olmasını sağlayınız.

Vietnamese

Lưu ý: Chắc chắn rằng những người sử dụng máy đều đã hiểu rõ tất cả các chỉ dẫn về cách vận hành máy và các dự phòng an toàn.

RETAIN THESE SAFETY INSTRUCTIONS

General Safety Instructions for All Semak Products

- Do not use the appliance for other than its intended use.
- Never leave the appliance unattended when in use.
- The appliance should not be used by children or infirm persons and close supervision is necessary when used near such persons.
- Always switch off at power outlet before removing the plug. Remove by holding the plug – do not pull the cord.
- When the appliance is not in use, or prior to cleaning, always switch off the power and remove the plug.
- To avoid the risk of electric shock, do not immerse the plug, cord or any part of the appliance in water or any other liquid.
- Do not use near a stove or heat source and do not let the cord come in contact with any hot surface.
- Do not use the appliance with an extension cord unless that cord has been checked and tested by a qualified technician or if it is an extension cord that has been manufactured by a reliable electrical goods manufacturer and has not been altered in any way.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in anyway. Return to Semak or an authorised service agent for repair.
- CAUTION Hot Surfaces.
- NEVER leave the appliance ON unattended.

Safety Instructions

1. Ensure that the power supply is also switched off before connecting to the electric outlet. Use only on AC 220-240V 50 Hz only.
2. To avoid risk of electric shock, do not immerse cord, plug or motor end of the appliance in water or any other liquid.
3. Always switch off at the power outlet before removing the plug. Remove by holding the plug - do not pull on the cord. When the appliance is not in use, or prior to cleaning, always switch off the power and remove the plug.
4. The Hand Dryer should not be used by children or infirm persons and care should be taken when used near these persons. The Hand Dryer should not be used outdoors. Young children should be supervised to ensure that they do not play with the appliance.
5. Avoid physical contact with moving parts.
6. Do not put hands into the Hand Dryer – Sever burns and injury may result.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, is dropped or damaged in any way. Return the appliance to Dimark Commercial Pty. Ltd. (Manufacturer) or its Authorised Service Agent for repair. Do not attempt to repair the machine.
8. For Safety reasons and to avoid maintenance by unskilled persons, the appliance should always be returned to Dimark Commercial Pty. Ltd. (Manufacturer) for adjustment or repair if required.

WARNING

This appliance should be used according to the instructions.

MISUSE of this appliance will cause HAZARD.

Operating Instructions for the Semak Hand Dryer

The Semak Hand Dryer is electronically operated for Health and Hygiene purposes

1. Before connecting to electrical outlet, visually inspect the cord and plug for faults.
2. Ensure that the Hand Dryer's push power supply is also switched off before connecting to the electrical outlet.
3. The Hand Dryer will only operate when the electronic sensor activates or the push button is triggered. Hold hands beneath the dryer or push the button to activate the switch.
4. When hands are removed the dryer will automatically switch off.

Cleaning Instructions for the Semak Hand Dryer

1. Always unplug the Hand Dryer from the power source before cleaning.
2. Clean with a damp soft cloth and sanitizer spray if required.
3. Avoid getting the spray inside the dryer.

Mounting Instruction

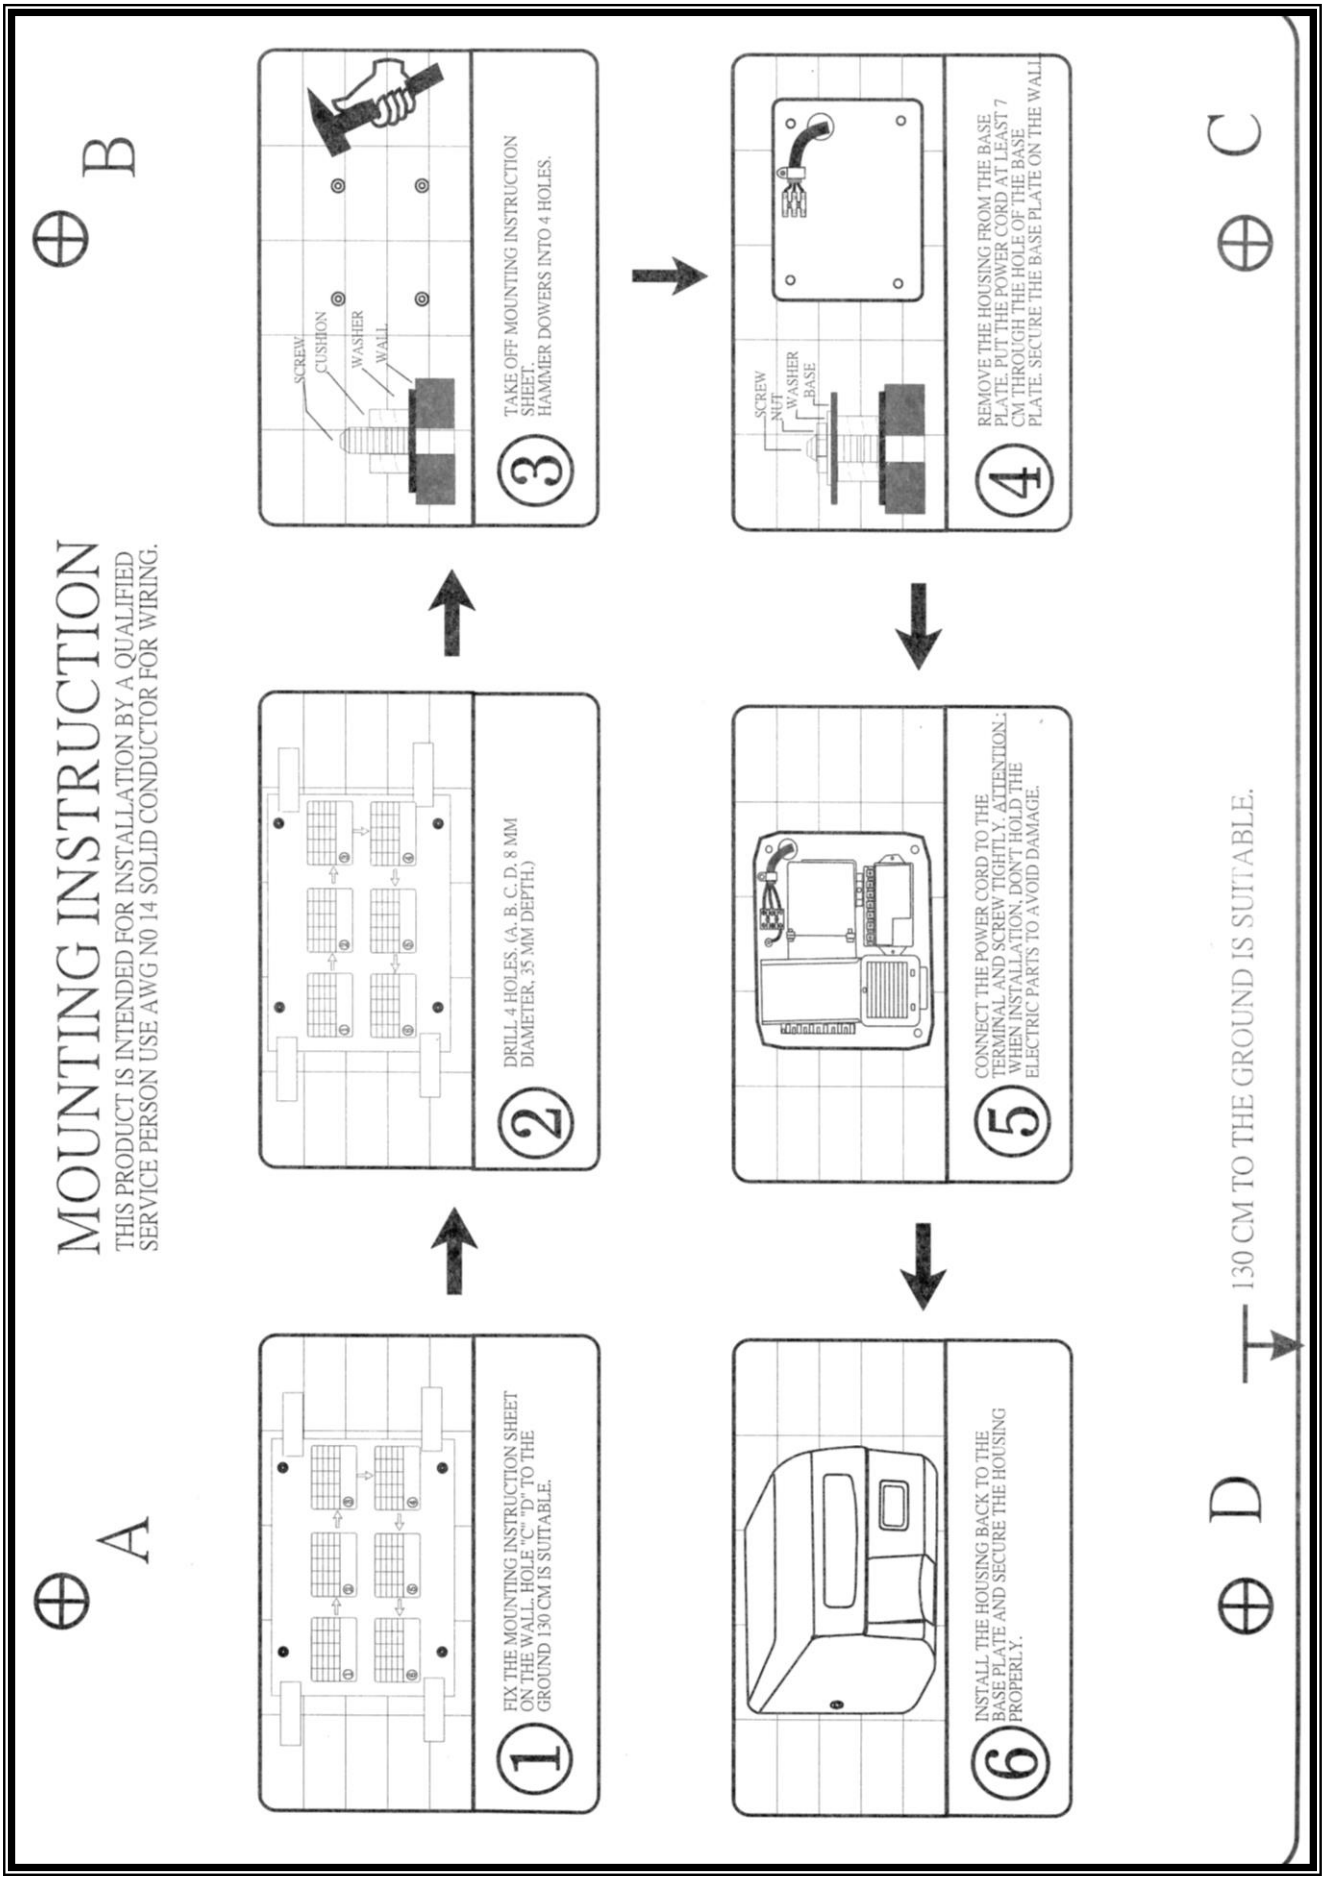

Connection Diagram & Parts List

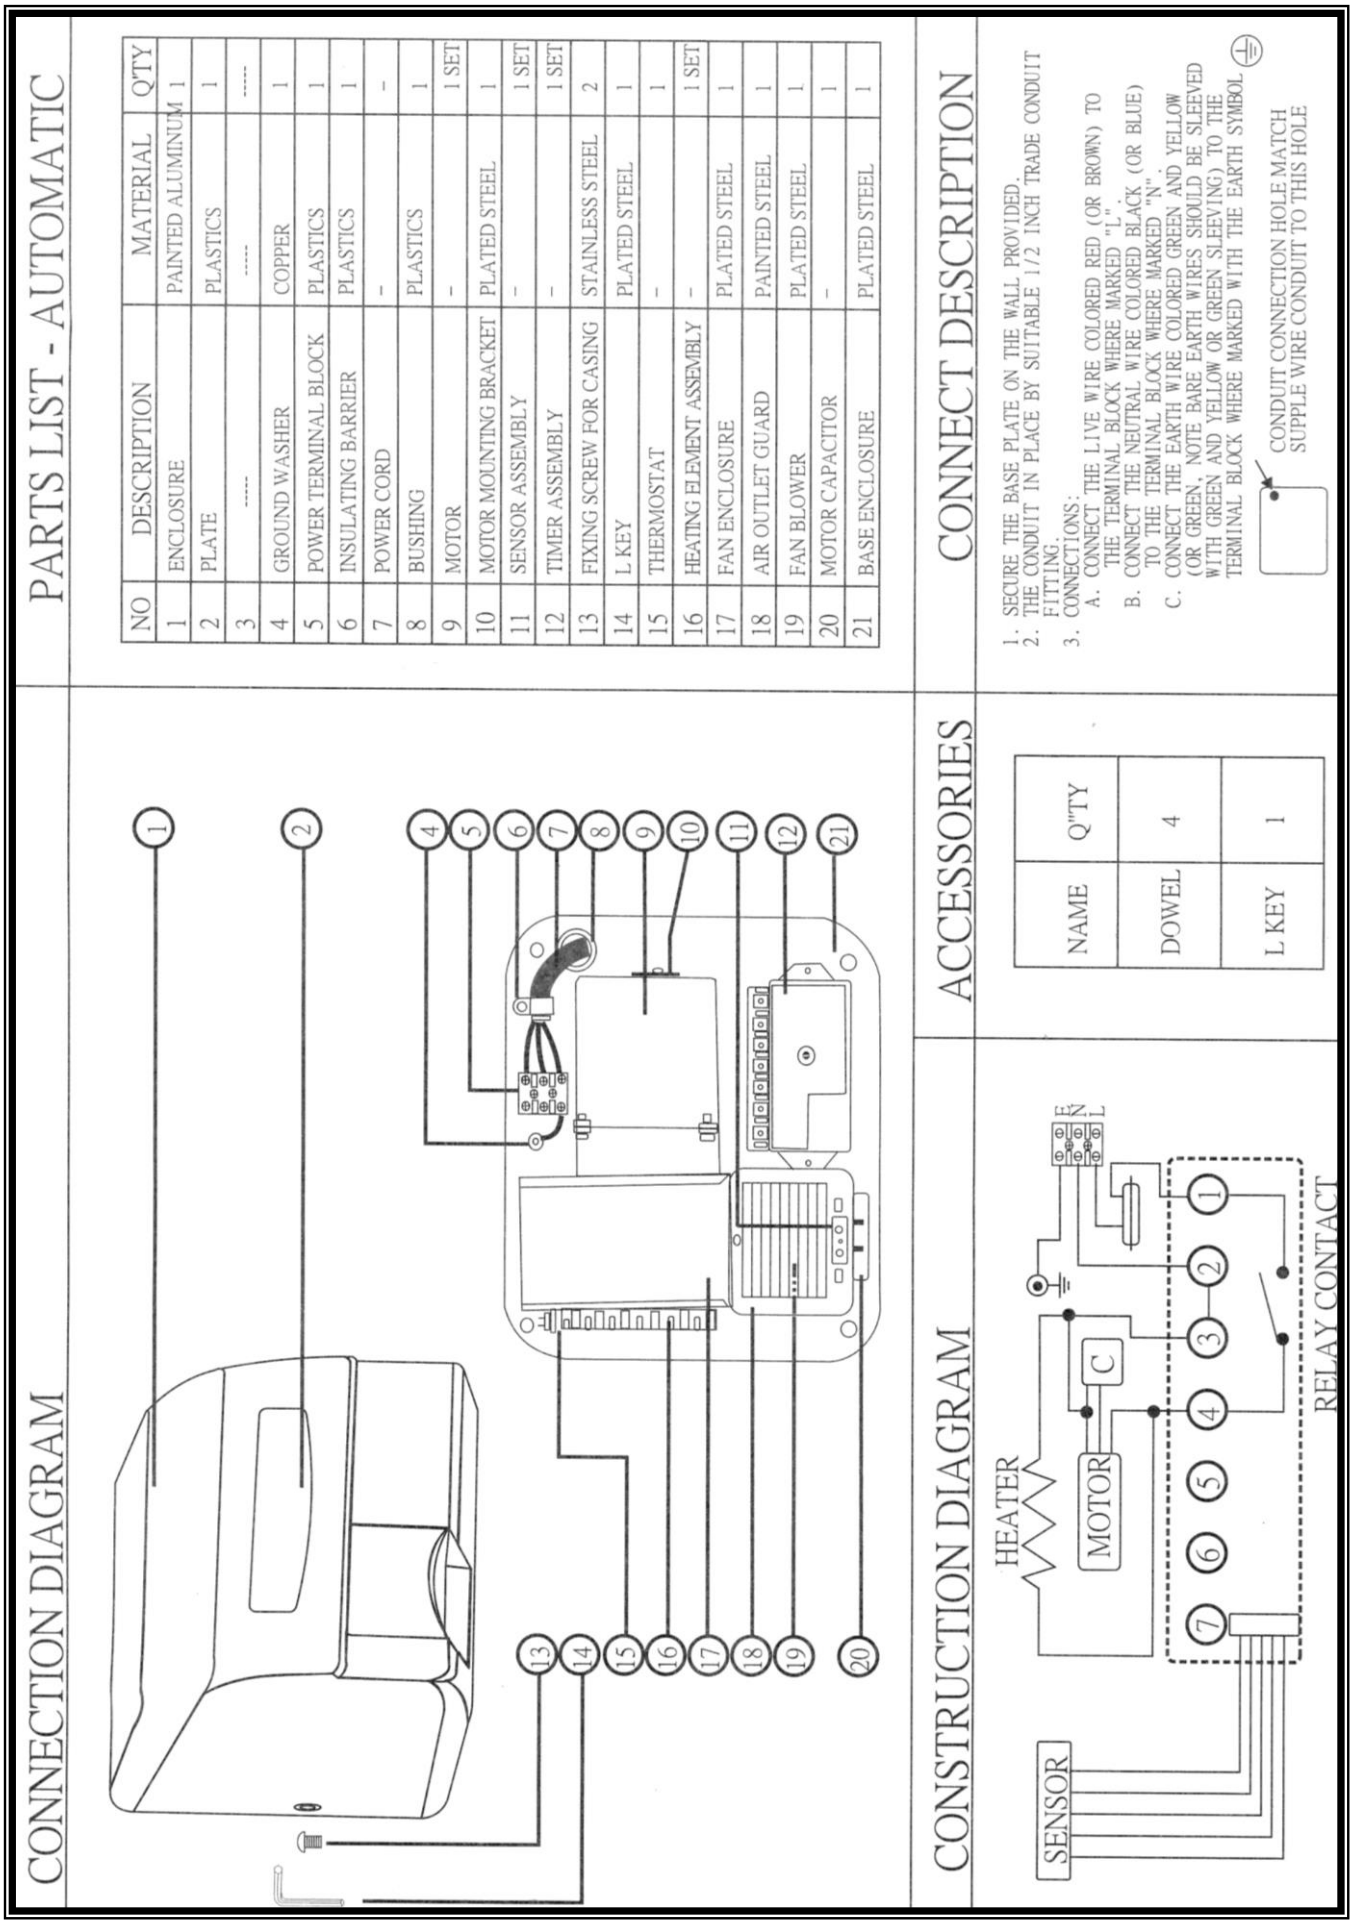

NO	DESCRIPTION	MATERIAL	QTY
1	ENCLOSURE	PAINTED ALUMINUM	1
2	PLATE	PLASTICS	1
3	-----	-----	-----
4	GROUND WASHER	COPPER	1
5	POWER TERMINAL BLOCK	PLASTICS	1
6	INSULATING BARRIER	PLASTICS	1
7	POWER CORD	-	-
8	BUSHING	PLASTICS	1
9	MOTOR	-	1 SET
10	MOTOR MOUNTING BRACKET	PLATED STEEL	1
11	SENSOR ASSEMBLY	-	1 SET
12	TIMER ASSEMBLY	-	1 SET
13	FIXING SCREW FOR CASING	STAINLESS STEEL	2
14	L KEY	PLATED STEEL	1
15	THERMOSTAT	-	1
16	HEATING ELEMENT ASSEMBLY	-	1 SET
17	FAN ENCLOSURE	PLATED STEEL	1
18	AIR OUTLET GUARD	PAINTED STEEL	1
19	FAN BLOWER	PLATED STEEL	1
20	MOTOR CAPACITOR	-	1
21	BASE ENCLOSURE	PLATED STEEL	1

NAME	Q"TY
DOWEL	4
L KEY	1

Specifications

Model	**MC007**
Dimensions	220 x 240 x 160 mm
Power	240 Volts, 50 Hz
Electrical	1800 Watts / 10 amp
Warranty	12 Months

Connection Description

1. Secure the base plate on the wall provided.
2. The conduit in place by suitable ½ inch trade conduit fitting.
3. Connections:
   a) Connect the live wire coloured Red (or Brown) to the terminal block where marked “L”.
   b) Connect the neutral wire coloured Black (or Blue) to the terminal block where marked “N”.
   c) Connect the neutral wire coloured Green and Yellow (or Green, Note: Bare earth wires should be sleeved with Green and Yellow or Yellow or Green sleeving) to the terminal block where marked with the earth symbol.

Service & Maintenance

The Semak Hand Dryer does not contain user-serviceable parts. For Service and Repair, contact Semak for your nearest Authorised Service Agent.

The Foodservice Industry is deemed a hostile environment within the scope of AS/NZS 3760:2003. Semak Hand Dryer MUST be routinely electrically tested for compliance with this standard if used commercially.

It is recommended that a Food Safety program such as HACCP be employed and that routine service and repair be undertaken at the time of electrical testing to ensure the correct operation and function of all parts.

Electrical Compliance

Semak Hand Dryer comply with the following electrical standards

CISPR 14

Warranty

The Semak Hand Dryer is a Commercial appliance. This product is guaranteed for 1 Years* from the date of purchase against mechanical and electrical defects. If the fault is deemed caused by MISUSE/ABUSE the terms of the warranty are invalidated. If the product has been opened or tampered with (i.e. in an attempt to repair it) the warranty is invalidated.

All warranty repairs should be undertaken by Semak Australia or one of its Authorised Repair Agents.

It is against company policy to authorize warranty repairs over the phone. Service Agents will require a work order number from Semak to conduct warranty repairs.

SEMAK® WARRANTY

THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED AND SOLD IN AUSTRALIA

The benefits conferred by this warranty are an alternative to all other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

Semak Australia. Warrant each new SEMAK appliance manufactured by SEMAK to be free from defects in materials or manufacturing process for a period of 1 Year from the date of original purchase.

Should defects due to faulty materials or manufacturing process develop within the warranty period, the appliance will be repaired without charge providing all conditions of this warranty are observed.

1. Proof of Purchase and Warranty card must be retained and available on request.
2. This Warranty is void if the equipment has been damaged due to misuses neglect or is used for a purpose for which it was not suited; and no repairs, alterations or modifications have been attempted by other than Semak or its authorised Service Agent.
3. Semak Australia. Reserves the right to reject a claim for warranty if service is required due to misapplication, improper installation, inadequate wiring, and incorrect voltage conditions. Under no circumstances shall SEMAK or its agents bear responsibility for consequential damages of any kind.
4. Where required by Statute or local authority, equipment must be installed by qualified person in accordance with all relevant regulations. Failure to do this will void product warranty.
5. Cost of transport of any appliance or part to and from SEMAK or its Service Agent is to be paid by the owner.
6. A charge will be made where failure is due to neglect, abuse or accidental damage on the part of the operator, or when no fault can be found or the fault is due to causes outside the control of Semak Australia.
7. The above does not preclude the purchaser from their Statutory rights as a consumer.

Semak Australia
Factory 18
87-91 Hallam South Road
HALLAM VIC 3803

Ph 03 9796 4583
Fax 03 9796 4586
Email technical@semak.com.au
Web www.semak.com.au

WARRANTY REGISTRATION

Retain for Future Reference

DO NOT SEND

Please complete one registration for each Semak appliance.

You may be required to provide this information when requesting after sales service. Please staple your proof of purchase to this page.

Company Name: _____

Company Address: _____

Business Type: _____

Contact: _____

Phone: _____

Fax: _____

Email: _____

Product: _____

Serial Number: _____

Date of Purchase: _____

Place of Purchase: _____